




METHOD FOR TREATING EDGES EXPOSED TO SURFACE SHEET FLOW

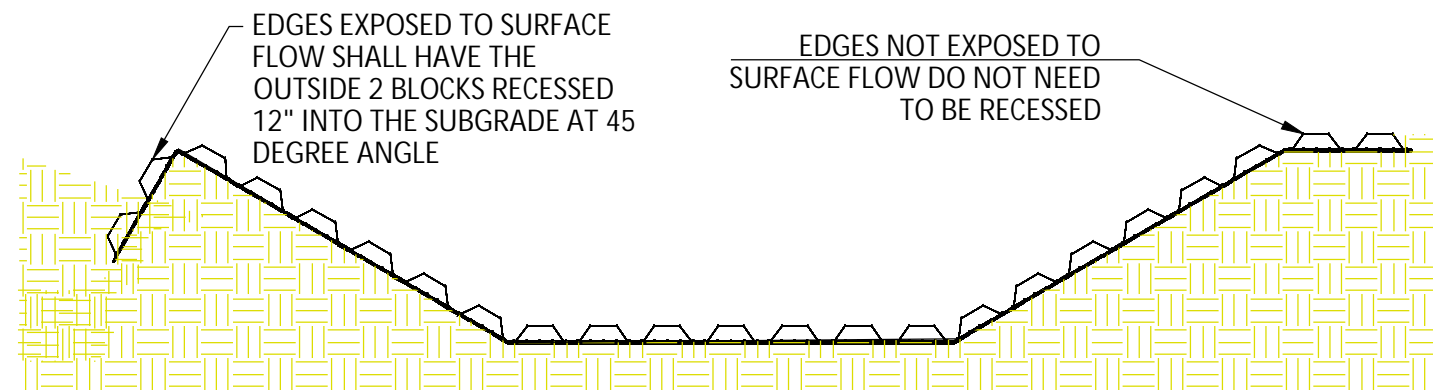


LEADING EDGE ANCHOR TRENCH AND OVERLAP SEAMS PERPENDICULAR TO FLOW

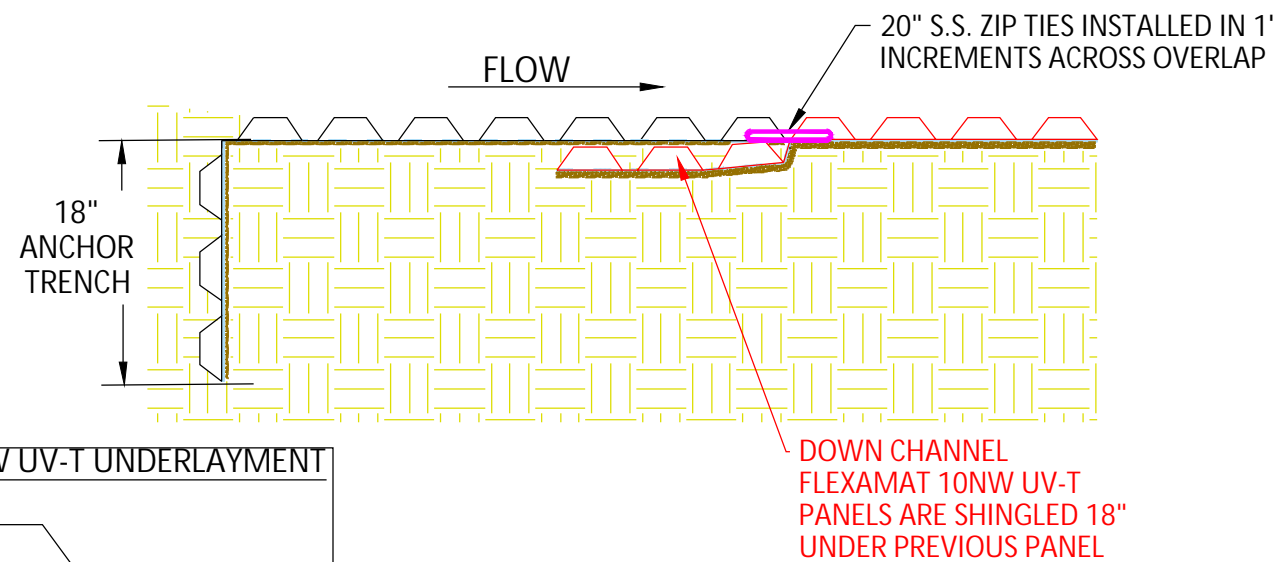

FLEXAMAT 10NW UV-T UNDERLAYMENT

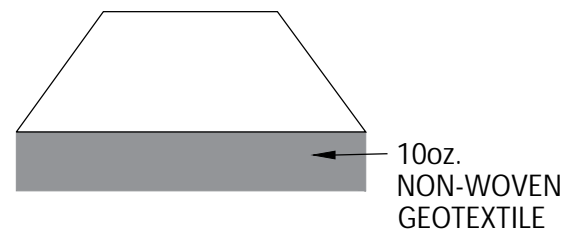

ABUTMENT METHOD FOR CHANNEL WIDER THAN 16'

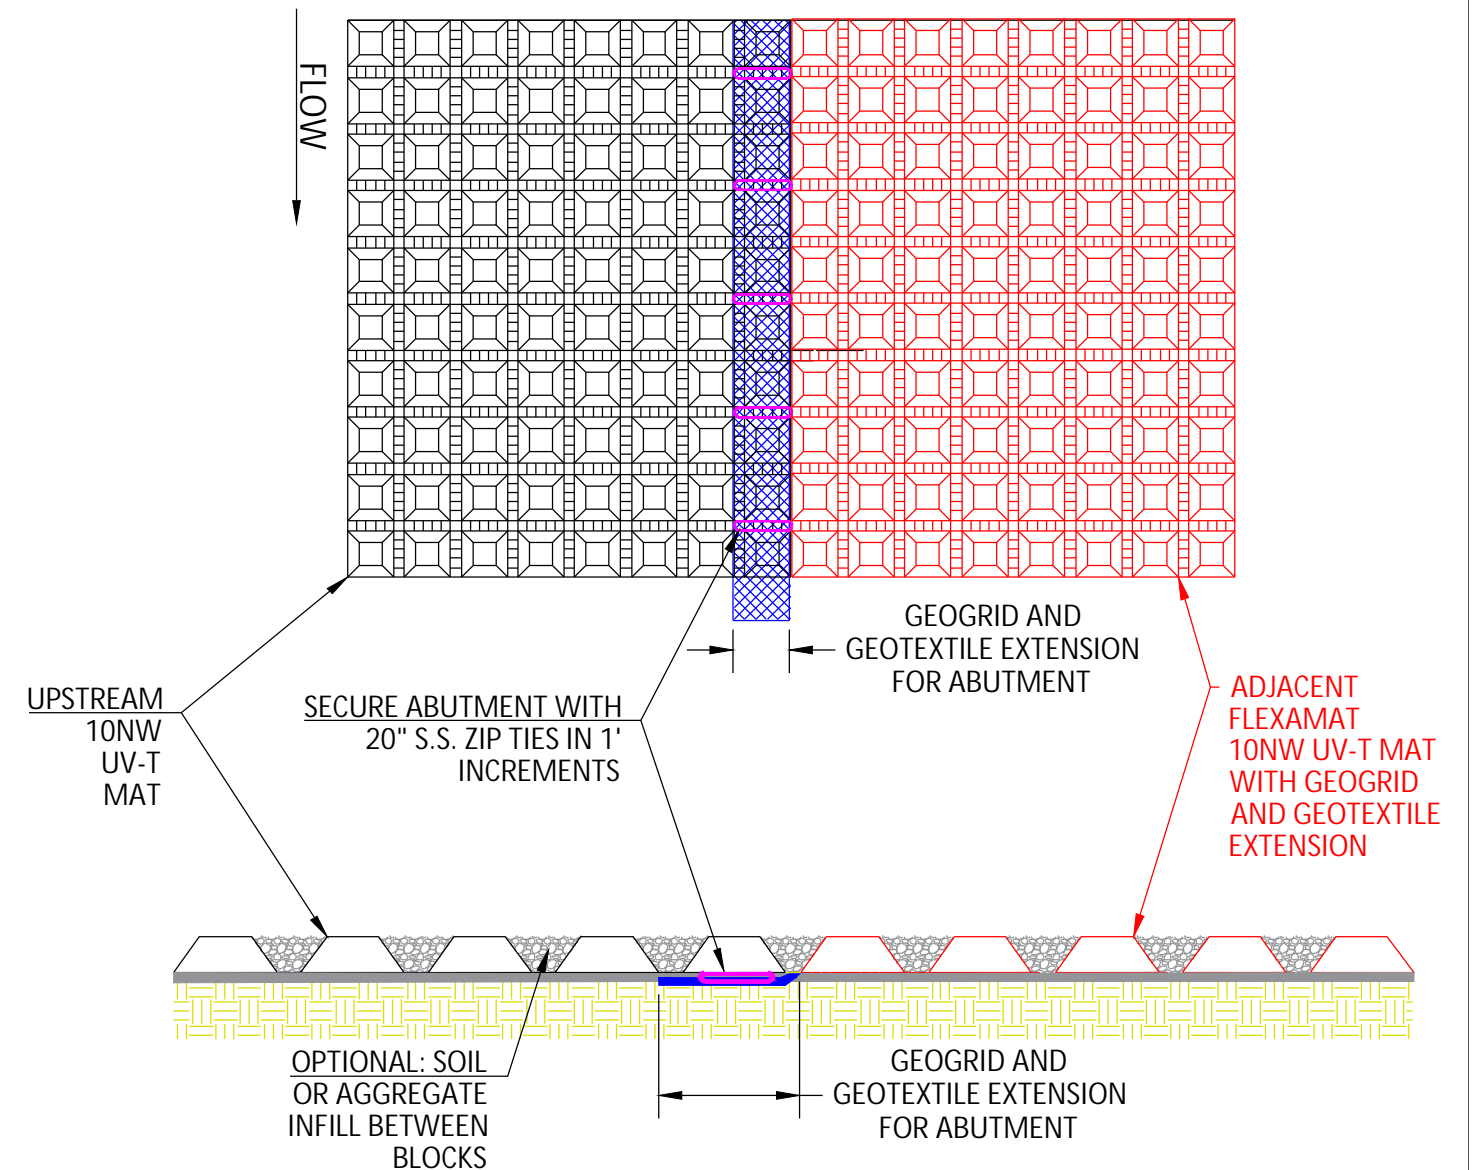

FLEXAMAT 10NW UV-T CHANNEL - LAYOUT PARALLEL TO FLOW

CONSTRUCTION NOTES:

1. AN ENGINEER OR MANUFACTURERS REPRESENTATIVE SHALL BE ONSITE FOR THE START OF THE INSTALLATION.
2. GRADE CHANNEL SO THAT WATER WILL FLOW DOWN CENTER OF THE CHANNEL AND BE CONTAINED TO THE CHANNEL. ALL SUBGRADE SURFACES PREPARED FOR PLACEMENT OF MATS SHALL BE SMOOTH AND FREE OF ALL ROCKS, STICKS, ROOTS, OTHER PROTRUSIONS, OR DEBRIS OF ANY KIND.
3. INSTALL FLEXAMAT 10NW UV-T ROLLS, USING THE WIDEST ROLLS POSSIBLE TO AVOID SEAMS.
 - 3.1. FOR CHANNELS THAT ARE WIDER THAN 16', INSTALL FLEXAMAT 10NW UV-T ROLLS THAT INCLUDE GEOGRID EXTENSIONS WITH 10NW UV-T GEOTEXTILE UNDERLAYMENT EXTENSIONS. THESE SEAMS ARE PARALLEL WITH FLOW, THE ADJACENT MAT INSTALLED OVER THE EXTENSIONS. ENSURE GEOGRID AND 10NW UV-T UNDERLAYMENT EXTENSIONS ARE LAYING FLAT ON SUBGRADE PRIOR TO INSTALLING ADJACENT MAT.
 - 3.2. SECURE THE ABUTMENT PARALLEL WITH FLOW BY INSTALLING 20" STAINLESS STEEL ZIP TIES IN 1' INCREMENTS THROUGH THE EXTENSION OVERLAP. U ANCHORS OR ZIP TIES TO BE INSTALLED PERPENDICULAR TO FLOW. ZIP TIES SHALL ENCOMPASS 3 CORDS OF GEOGRID FROM EACH MAT.
4. FOR ADDITIONAL SECTIONS OF MAT, SECURE SEAM PERPENDICULAR WITH FLOW BY OVERLAPPING THE DOWNSTREAM SECTION 18" WITH UPSTREAM SECTION OF MAT. PRIOR TO INSTALLING OVERLAP, FLIP UPSTREAM MAT BACK 24". EXCAVATE 2.25" OF SOIL 18" FROM END OF UPSTREAM MAT. DOWNSTREAM SECTION IS LAID IN THE SHALLOW TRENCH. FLIP END OF UPSTREAM MAT OVER THE INITIAL LEADING EDGE OF DOWNSTREAM MAT.
 - 4.1. SECURE OVERLAPS PERPENDICULAR TO FLOW BY INSTALLING 20" STAINLESS STEEL ZIP TIES IN 1' INCREMENTS THROUGH THE OVERLAP. ZIP TIES SHALL ENCOMPASS 3 CORDS OF GEOGRID FROM EACH MAT.
5. AT THE INITIAL LEADING EDGE OF THE FLEXAMAT 10NW UV-T ARMORED CHANNEL, EMBED THE MAT 18" IN A VERTICAL ANCHOR TRENCH. FILL AND COMPACT ANCHOR TRENCH WITH SUITABLE FILL. AT ENDING EDGE OF PROTECTION, EMBED THE MAT 18" IN A TERMINATION TRENCH. THE TRENCH SHALL BE FILLED AND COMPACTED WITH SUITABLE FILL, AS DETERMINED BY THE ENGINEER OF RECORD.

MOTZ
ENTERPRISES, INC.

Flexamat

(513)772-6689

Info@Flexamat.com

Flexamat.com

