

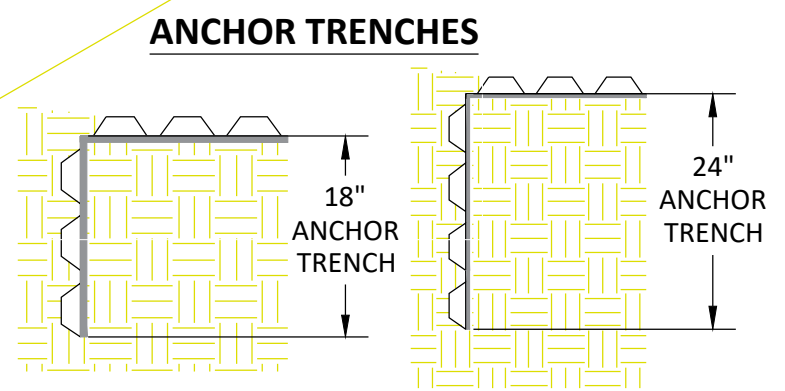
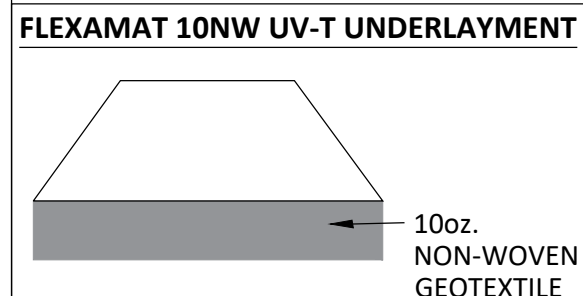


### ISOMETRIC VIEW OF SLOPE AND ANCHOR TRENCHES

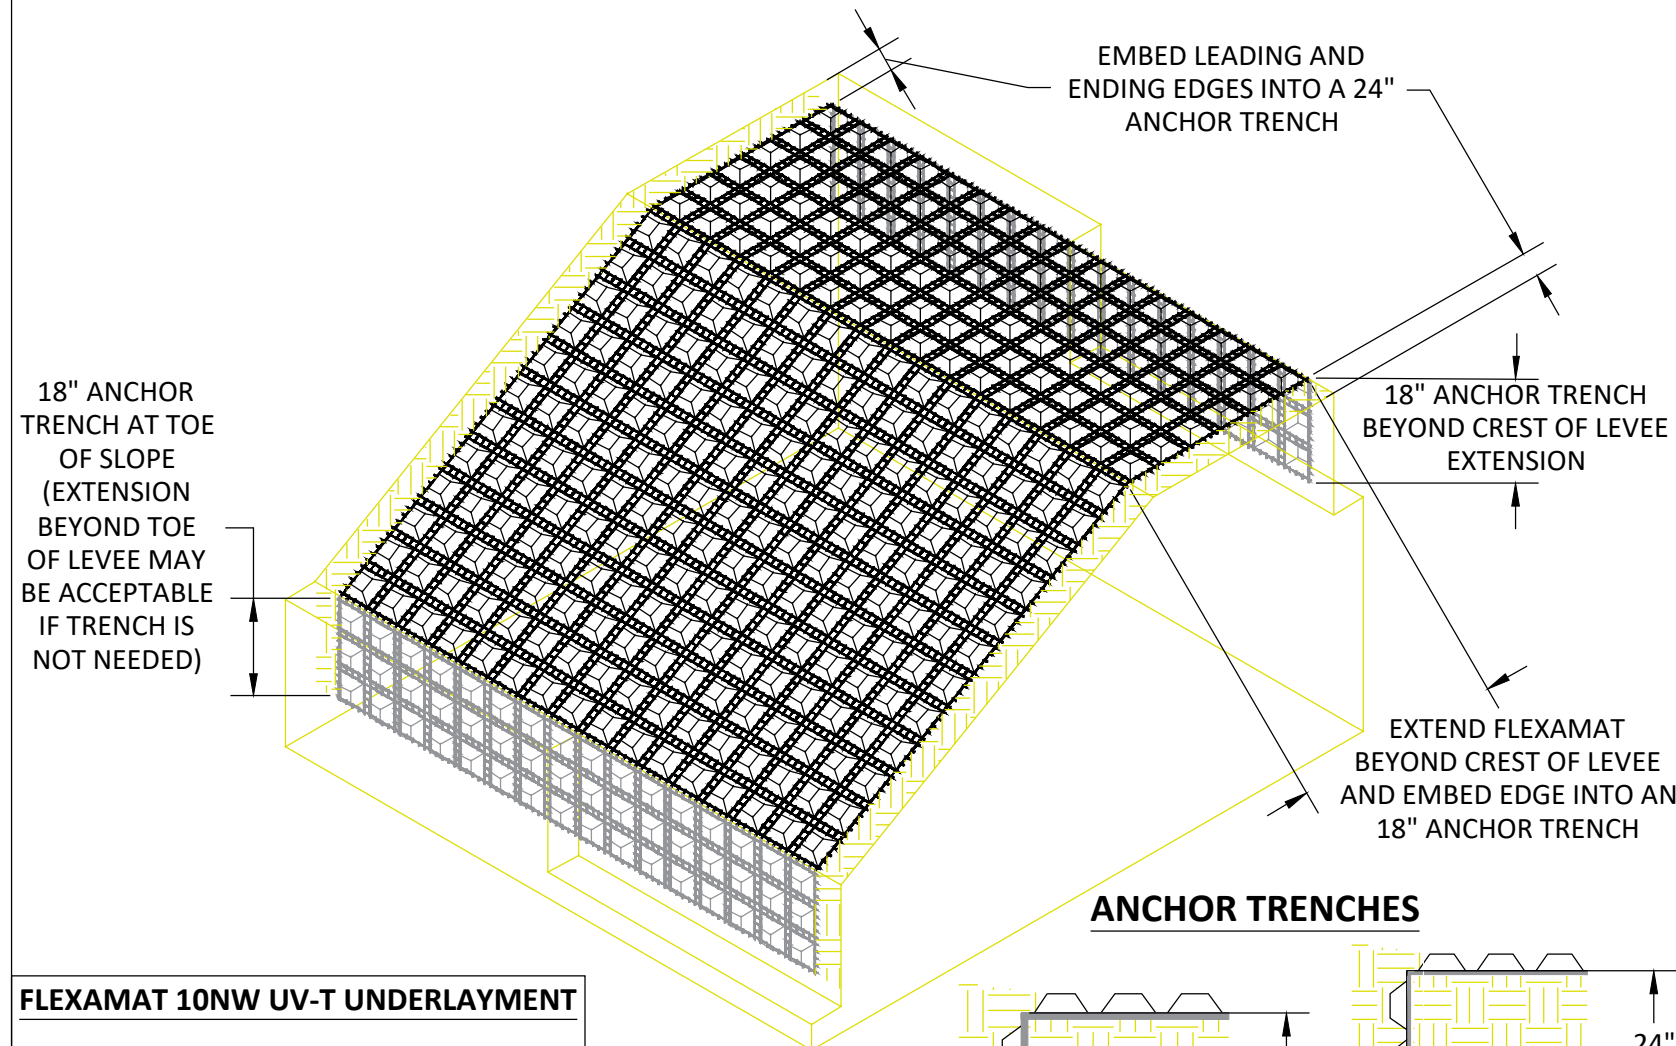

### ABUTMENT METHOD FOR SEAMS WITH EXTENSIONS

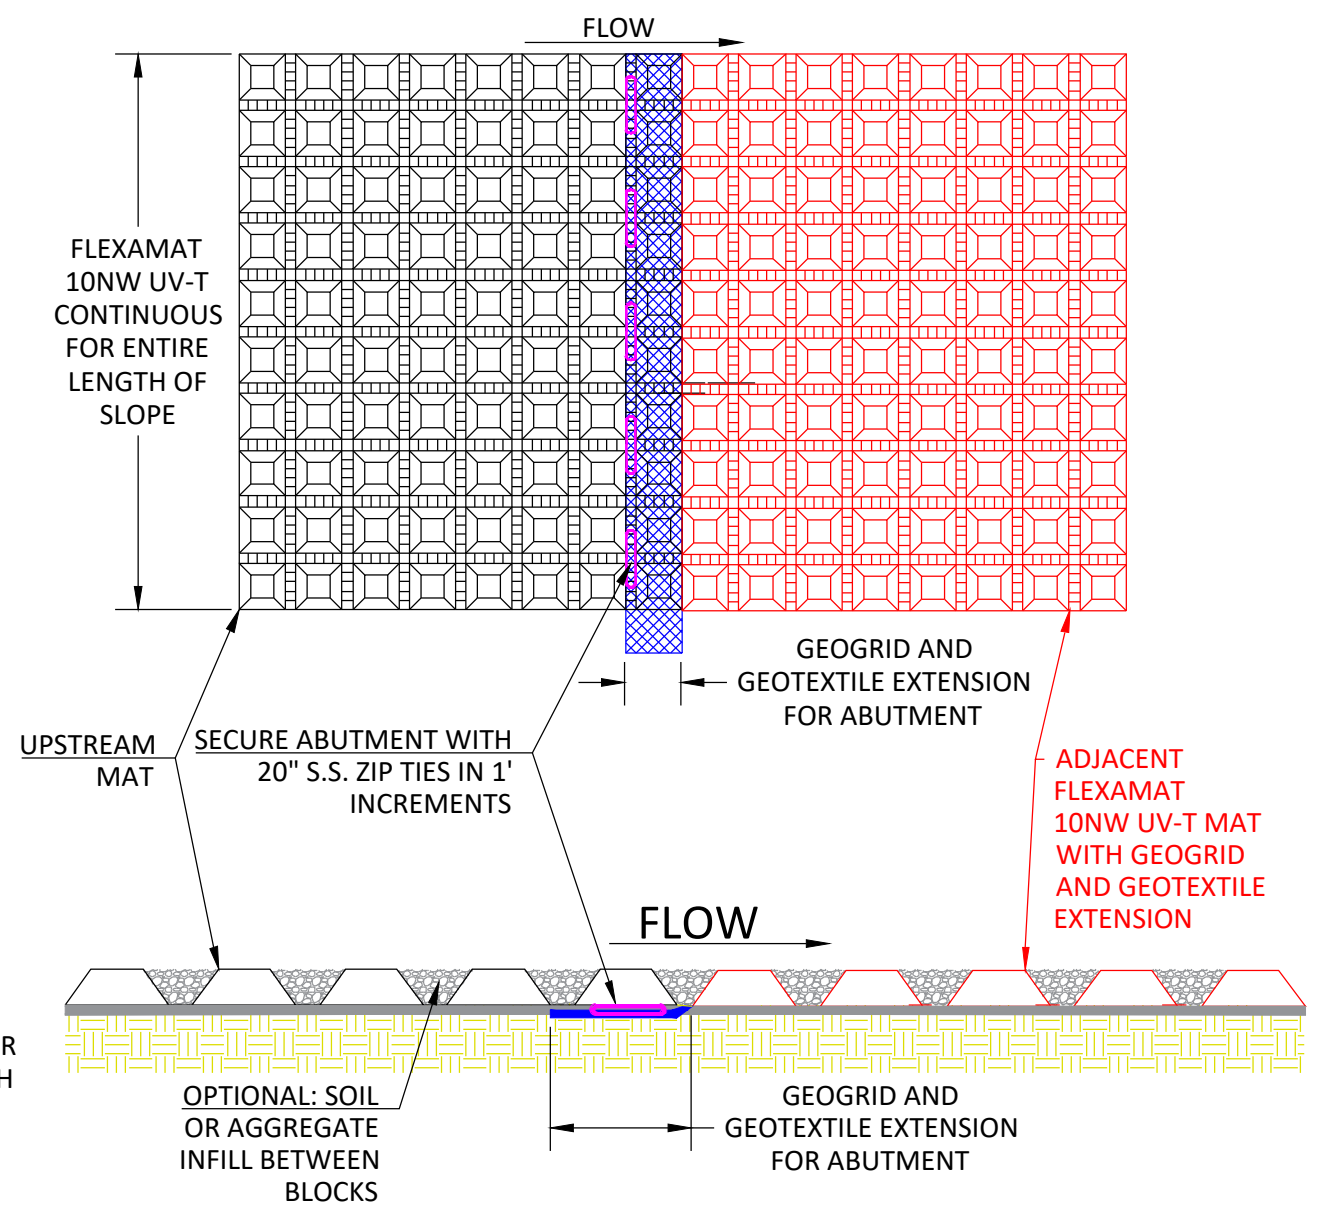

## FLEXAMAT 10NW UV-T - LEVEE ARMORING

### CONSTRUCTION NOTES:

1. AN ENGINEER OR MANUFACTURERS REPRESENTATIVE SHALL BE ONSITE FOR THE START OF THE INSTALLATION
2. ALL SUBGRADE SURFACES PREPARED FOR THE PLACEMENT OF MATS SHALL BE SMOOTH AND FREE OF ALL ROCKS, STICKS, ROOTS, OTHER PROTRUSIONS, OR DEBRIS OF ANY KIND.
3. FLEXAMAT 10NW UV-T INSTALLATION WILL START AT THE DOWN CHANNEL END OF THE INSTALLATION AREA AND MOVE TOWARDS THE UP CHANNEL END OF THE INSTALLATION.
4. INSTALL FLEXAMAT 10NW UV-T ROLLS THAT INCLUDE A GEOGRID EXTENSION AND GEOTEXTILE 10NW UV-T UNDERLAYMENT EXTENSION FOR ABUTTING MATS. THE TOP EDGE OF MAT SHALL BE RECESSED 18" INTO THE SLOPE.
  - 4.1. INSTALL SUBSEQUENT MATS OVER THE GEOGRID AND GEOTEXTILE 10NW UV-T UNDERLAYMENT EXTENSIONS OF THE DOWNSTREAM ADJACENTLY INSTALLED MAT. MATS SHALL BE CONTINUOUS FOR ENTIRE LENGTH OF SLOPE.
5. SECURE MAT ABUTMENT SEAMS IN 1' INCREMENTS USING 20" STAINLESS STEEL ZIP TIES.
6. AT THE BEGINNING AND END OF THE LEVEE PROTECTION, EMBED THE MAT 24" PAST THE ANTICIPATED SCOUR POINT. FILL AND COMPACT TERMINATION TRENCH WITH COHESIVE SOIL.
7. EXTEND FLEXAMAT 5' PAST TOE OF SLOPE OR TRENCH MAT 18" AT THE TOE OF SLOPE.

**MOTZ ENTERPRISES, INC.**

Flexamat  
 (513)772-6689  
 Info@Flexamat.com  
 Flexamat.com

